




TECHNICAL BULLETIN: DrySnap -7C
RE: Zip Screwing Joist Bracket Connections

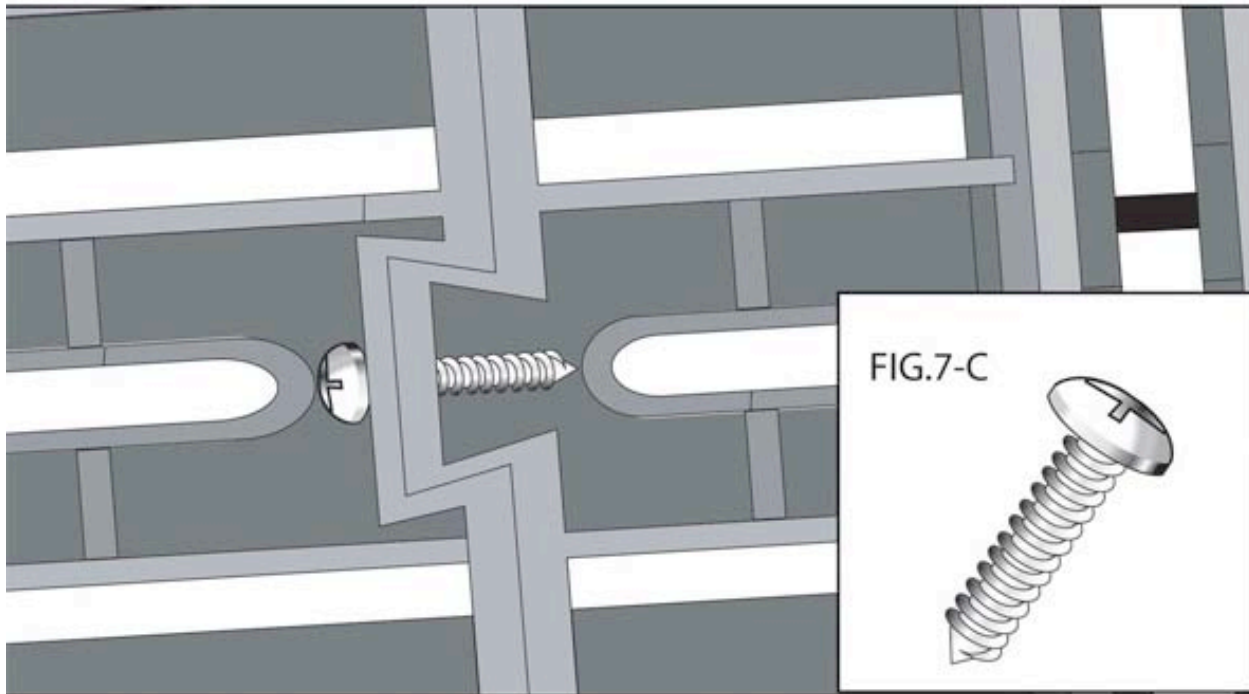

11. After first bracket of each row is properly located and installed, install entire row of brackets. Brackets snap in place, giving you two free hands to slide spacer under joist (FIG.7-A), and screw bracket in place (FIG.7-B). Due to inconsistency with deck building, wood joists and structure settling, connect the DrySnap joist bracket dove tail connections with a 1/2" #8 zip Phillips head screw (not included) (FIG.7-C).

FOR COMPLETE DETAILED INSTRUCTIONS ON INSTALLING DRYSNAP, VISIT:

<http://www.drysnap.com/detail1.html>

