


DrySnap® Under Deck Fan and Light Installation Sheet



805 Pennsylvania Blvd
Feasterville, PA 19053
800.523.8852
www.drysnap.com


STEP 1

Install pressure treated board to joist and flush with the top side of panel.

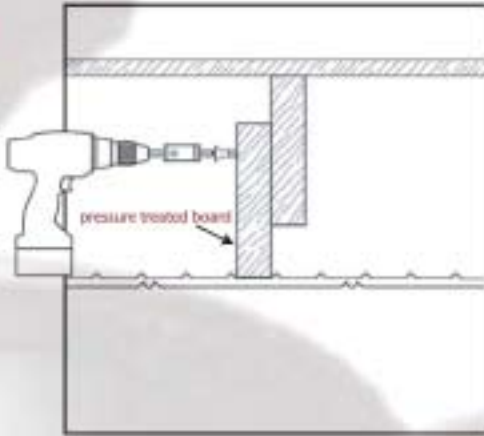


STEP 2

Drill hole in panel with 13/16" spade bit.

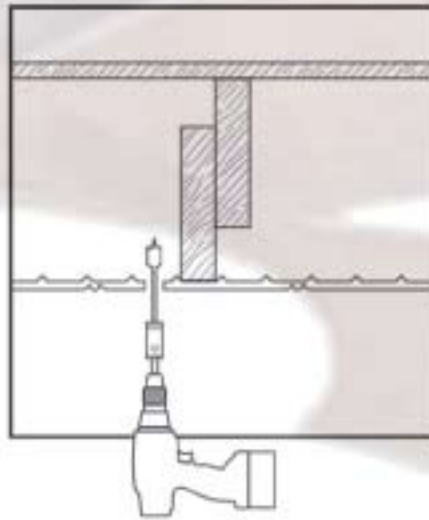


STEP 3

Install 1/2" flex conduit and clamp. Flex conduit should be flexed over and clamped to prevent water from entering open end. Install Saf-T-Pan.

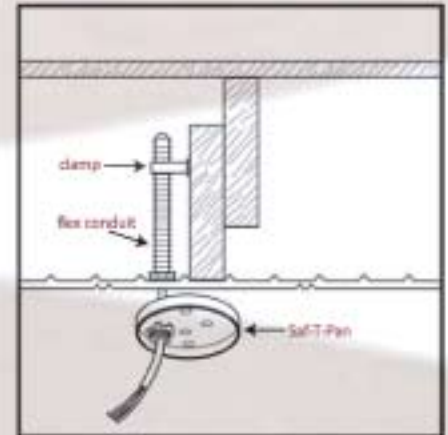

STEP 4

After installing Saf-T-Pan and 3/4" nut to lock down the conduit, apply caulk to prevent leakage.

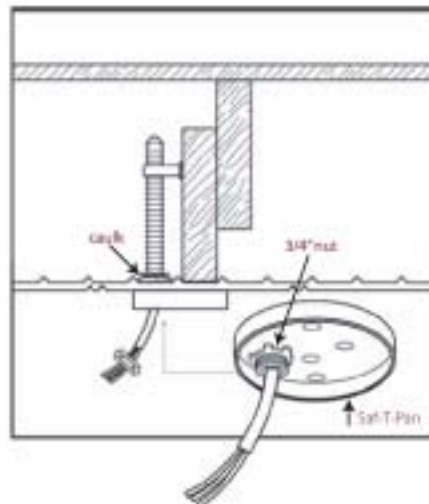

STEP 5

Install Saf-T-Pan to joist and install fan or light fixture.

